

UNIVERSAL RTT AWNING BRACKETS

PART NO. T050801590

DARCHE[®]

IMPORTANT

Before setting up for the first time read the instructions carefully. Make sure the product is fully assembled before use as per the instructions outlined.

WARNING:


Maximum weight rating 30kg

TOOLS REQUIRED:

- 5mm hex key
- 13mm spanner

STEP 1:


Determine the desired bracket spacing and attach the bracket face plates to the back of your awning accordingly using the mounting bolts from your awning.

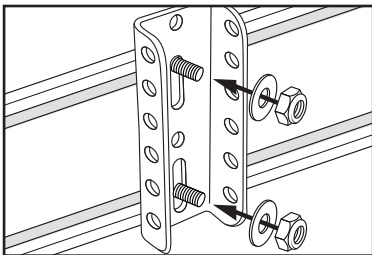

STEP 2:


Attach the bracket side plates to each bracket face plate using the provided M8x20mm bolts, flat washers, spring washers, & nyloc nuts. The side plates

can be mounted at various heights & in either orientation to suit your setup. At this stage, only use the upper holes on the side plates if you plan to use the optional bottom extensions (see Step 3). If not, fasten the side plates using both the upper and lower holes.

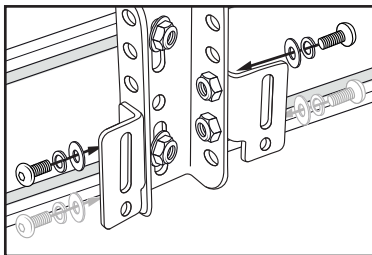

STEP 3 (OPTIONAL):


For roof top tents with T-channels on the bottom, the bottom extension can be added to the brackets. Attach the bottom extension to the pattern by bolting it through the bottom holes on the side plates using M8x20mm bolts, flat washers, and nyloc nuts.

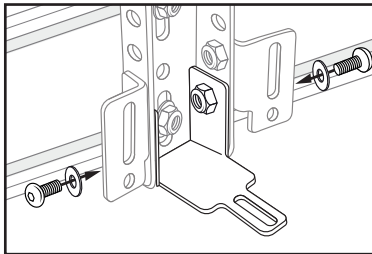

STEP 4:

Depending on the type of side channel on your roof top tent, insert either the square nuts or T nuts into the side channels. Attach the brackets & awning onto your roof top tent using the provided M8x14mm bolts, flat washers, & spring washers.

It is important to periodically check that all parts of the brackets are fully secured, & prolonged travel on uneven, rough, or corrugated terrain will require more frequent inspections.

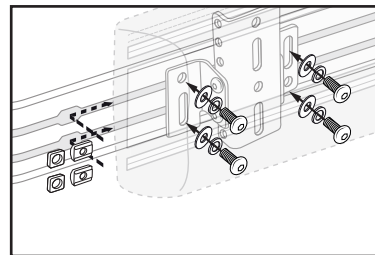

**DARCHE: LEADERS IN OUTDOOR
DESIGN, PROUDLY AUSTRALIAN.**

V1 - MAY 2026